


Replacing the CUBE filters

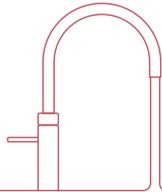

Replacing the CUBE filters

The CUBE is equipped with an Active Carbon filter and a Hollow Fibre filter. These filters ensure a better water quality because they reduce unpleasant tastes and odours, and reduce the concentration of microorganisms in the water. Furthermore, the filter material captures particles such as sand and suspended solids. For hygienic reasons, the filter must be replaced annually, regardless of the amount of water used.

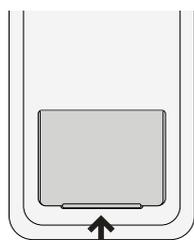


fig. 1

Snoozing

After 12 months, the CUBE will start beeping and the light on the CUBE tank will flash to indicate that the filter needs to be replaced. The filter can be accessed under the sliding panel on top of the CUBE (fig. 1). Instructions for replacing the filter are printed on the filter cartridge.

The beeping sound can be snoozed for 72 hours, giving you time to order a new filter via quooker.co.uk. To snooze the beeping sound, briefly press the red illuminated button under the sliding panel on top of the CUBE (fig. 2). The red light will go out and the beeping sound will stop temporarily.

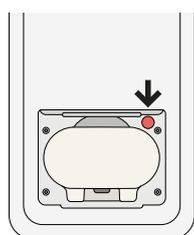


fig. 2

Replacing the filter

As soon as you have a new filter, you can replace the old one. You can find the filter holder under the sliding panel on top of the CUBE. Remove the filter holder from the CUBE by pressing the black button and pulling the holder up. Now unscrew the old filters by turning them anti-clockwise (fig. 3). Then screw in the new filters (clockwise), until they cannot be tightened any further (fig. 4). Be careful to keep the location of both filters the same. Now place the filter holder back into the CUBE and push down firmly until you hear a click.

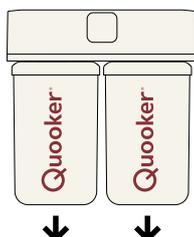


fig. 3

Resetting

Once the filter has been replaced, you can reset the timer for another 12 months. To do this, press and hold the red illuminated button under the sliding panel for 5 seconds until the CUBE beeps. The red light will go out. Now run the filtered water for 20 seconds and check that the filter holder is not leaking.

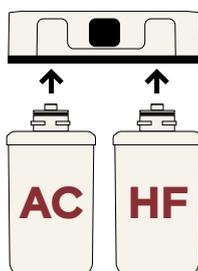


fig. 4

Quooker®

Quooker UK Ltd.
Beaumont Buildings
Great Ducie Street
Manchester M3 1PQ
+44 (0)207 923 3355
service@quooker.co.uk
www.quooker.co.uk